Installation Guide

Chios 102 Tondo Inset Bath

Please leave this guide with the end user.

Important — read this first!

1 Inspect the bath **before installation**, to ensure there are no visible defects. If a defect is found, do not install the bath and contact the supplier immediately. Claims for defects will not be accepted after the product has been installed.

2 The bath must be installed by a **licensed tradesperson**. Failure to do so may void the warranty.

3 Compliance with **AS.3740 Waterproofing of Wet Areas within Residential Buildings** applies when installing baths.

4 **Local authorities** may have specific installation requirements and this should be checked before installation.

5 Grade the **bath sub-floor** in accordance with requirements of local authorities. Grade sub-floor 1:60 minimum.

6 The **protective film** on the bath should be left intact during installation and should remain on the bath until first use.

Protective film | Care and maintenance of the bath surface

1 There is a **protective film** on the acrylic surface of the bath at the time of purchase. This should remain intact until the bath is ready to use to protect the bath during installation.

2 To preserve its polished finish, this bath should be cleaned with a **soft cloth using warm, soapy water or household detergent**. Do **not** use abrasive cleaning products.

3 If accidental scratches, abrasions or burns occur, the surface finish can be restored by gentle polishing with Brasso.

4 For full warranty terms and conditions, please visit seima.com.au

Base support for the bath

1 The design of acrylic baths allows the base of the bath to be supported by **three timber support battens**.

2 Position and fix **timber support battens** to the base of the bath and the floor, using a suitable floor and wall panelling adhesive. Ensure that the bath is neatly fitted and properly supported.

3 During installation, use a spirit level to check that the **bath rim is level**.

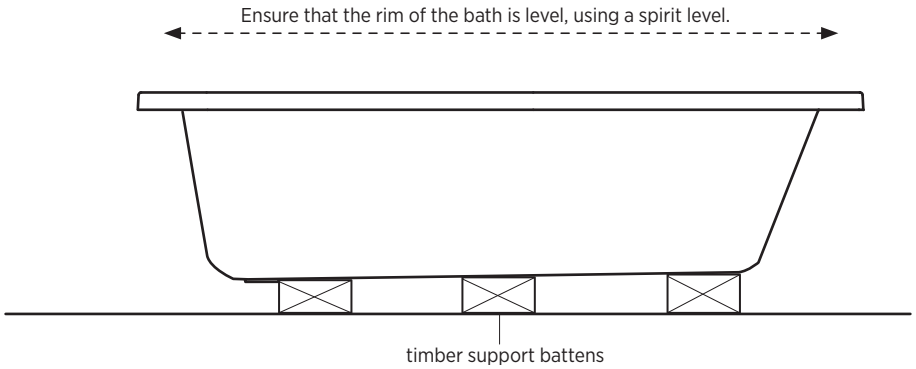

SEIMA

kitchen + laundry + bathroom ware

seima.com.au

Please note
- All measurements are in millimetres.
- Dimensions are nominal and subject to normal ceramic manufacturing variations of ±5mm.
- Fixing: Use acetic cured silicone sealant. Do not use epoxy type adhesives.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.

Suits both built-in and island installation.

1 **Built-in installation**— see diagram below — the side of the bath is built into the wall.
The 50x25mm support battens run the full length of the bath in the wall.

2 **Island installation** — see diagram below — there is a ledge between the wall and the side of the bath.
The minimum setout from the wall is 75mm. Refer to the local authority for local setout requirements.

3 Ensure that the area under the bath is **ventilated** in accordance with local requirements.

Built-in installation

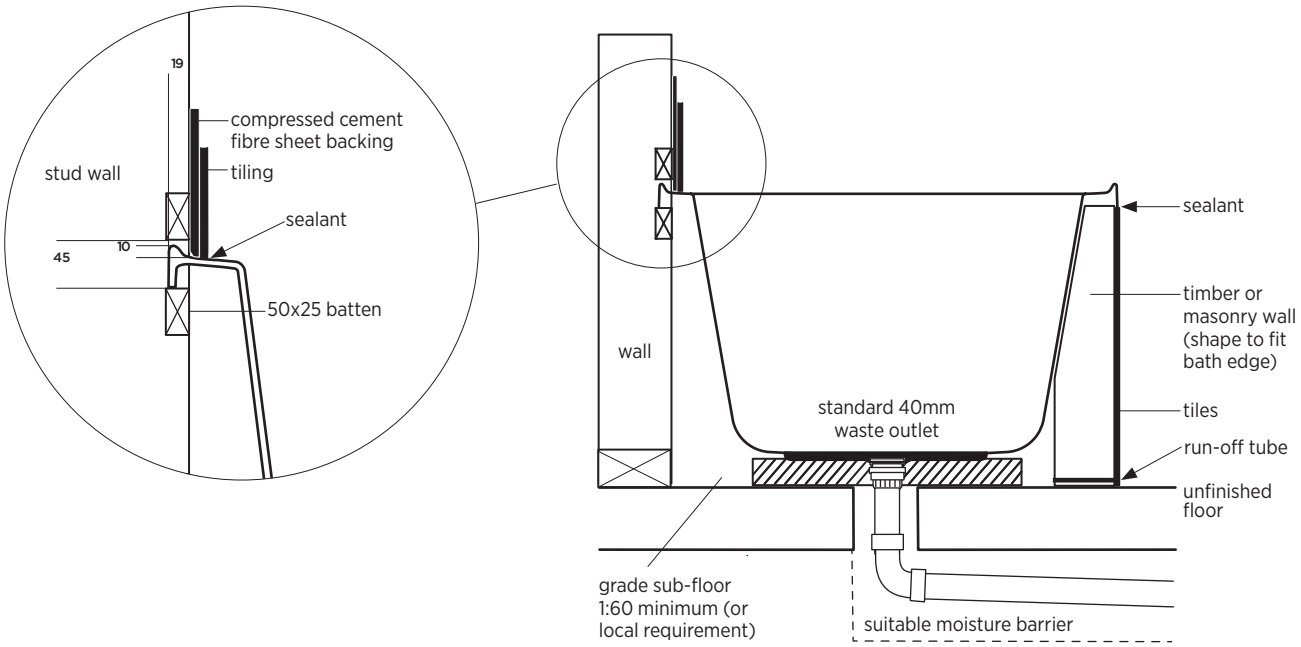

Island installation

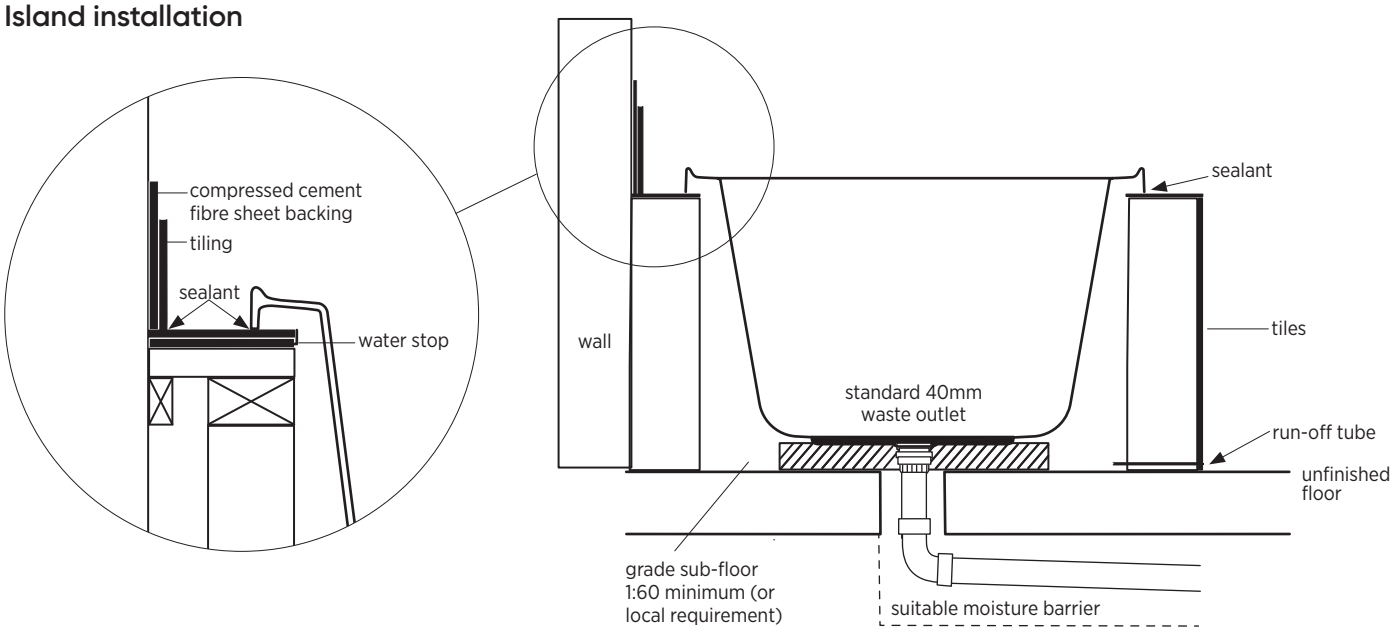

SEIMA

kitchen + laundry + bathroom ware

seima.com.au

Please note
- All measurements are in millimetres.
- Dimensions are nominal and subject to normal ceramic manufacturing variations of ±5mm.
- Fixing: Use acetic cured silicone sealant. Do not use epoxy type adhesives.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.