



Arko Wall Hung

Collection: Elevate

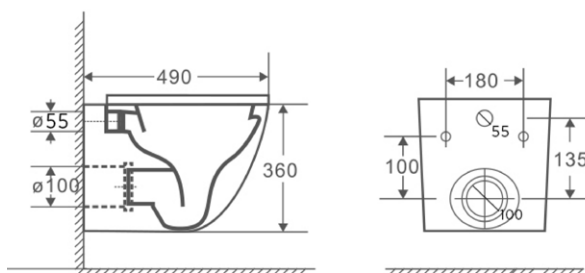

Available in
White Gloss or
White Silk Matte
ceramic

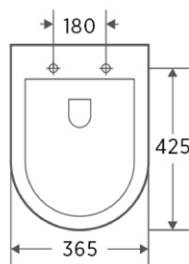

 Rimless Clean Flush pan – for an efficient, powerful flush

Ceramic wall hung toilet suite

- Clean Flush / Short Projection
- Available in White Gloss or White Silk Matte ceramic
- Flat toilet seat

Features

- Stylish design with curved pan, sits flat against wall
- Clean Flush rimless pan design for an efficient, powerful flush
- White vitreous china
- Easy-clean quick release seat with stainless steel pins, soft closing
- P trap

Order Inwall Cistern and Flush Plate separately.

- Inwall cistern activated through flush plate buttons
- Fully insulated with anti-condensation foam to prevent moisture escape
- Easy to install and service through the flush plate

Product details

PAN	Wall faced with rimless Clean Flush pan design.
MATERIAL	White vitreous china.
TRAPS	Suitable for P trap installations.
SEAT	Quick release seat with stainless steel hinges, soft closing. Flat seat design.
WELS RATING	4 Star 4.5/3.3L flush. Reg No. L06762. WELS Licence 0296. WM Licence 23345.
CISTERN	Wall hung pan suits in-wall cistern with frame.

Order codes

Toilet Pan and Seat

White Gloss Ceramic Toilet Pan and Flat Seat

191165 Arko WH pan, White Gloss, Flat seat (silk finish)

White Silk Matte Ceramic Toilet Pan and Flat Seat

192592 Arko WH pan, White Silk Matte, Flat seat (matte finish)

Inwall Cisterns for Wall Hung Toilets

Mechanical Actuation


192682 Inwall Cistern M200, 80mm (slim, suits standard wall)
192683 Inwall Cistern M201, 130mm (suits nib wall)

Pneumatic Actuation

191808 Inwall Cistern C200, 80mm (slim, suits standard wall)
191809 Inwall Cistern C201, 130mm (suits nib wall)

Flush Plates

Compatible with all Seima Flush Plates. Order separately.

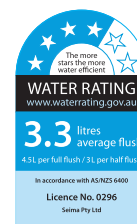

SEIMA

kitchen + laundry + bathroom ware

seima.com.au

Please note


- Installation shall be in accordance with AS/NZS3500.
- All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant. Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.

- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.

Wall Hung installation types:


Standard Wall – M200/C200 cistern

The 200 cistern can be installed within a standard wall, allowing for a cistern thickness of 80 mm. The flush button plate is placed on the wall above the toilet pan (front access). The cistern can be serviced through the flush plate. The 200 cistern can also be used in a nib wall.

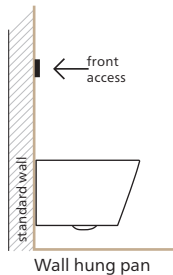


Nib Wall – M201/C201 cistern


The 201 cistern can be installed within a nib wall, allowing for a cistern thickness of 130 mm. The flush button plate is placed either on the wall above the toilet pan (for front access) OR on the top of the nib wall (for top access).

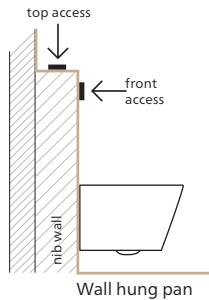

Arko WH toilet with C200 or M200 Inwall Cistern with Frame (80mm thick, suits standrd wall)

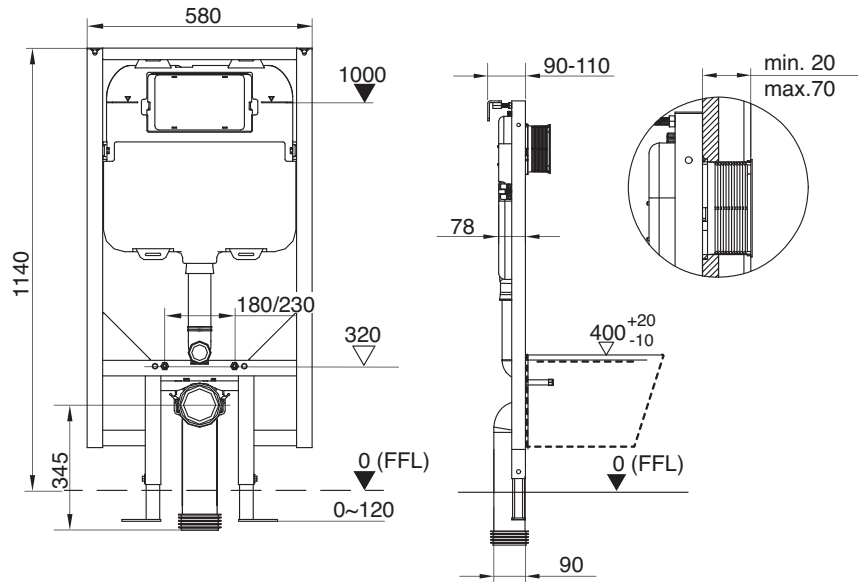

Arko WH toilet with C201 or M201 Inwall Cistern with Frame (130mm thick, suits nib wall)

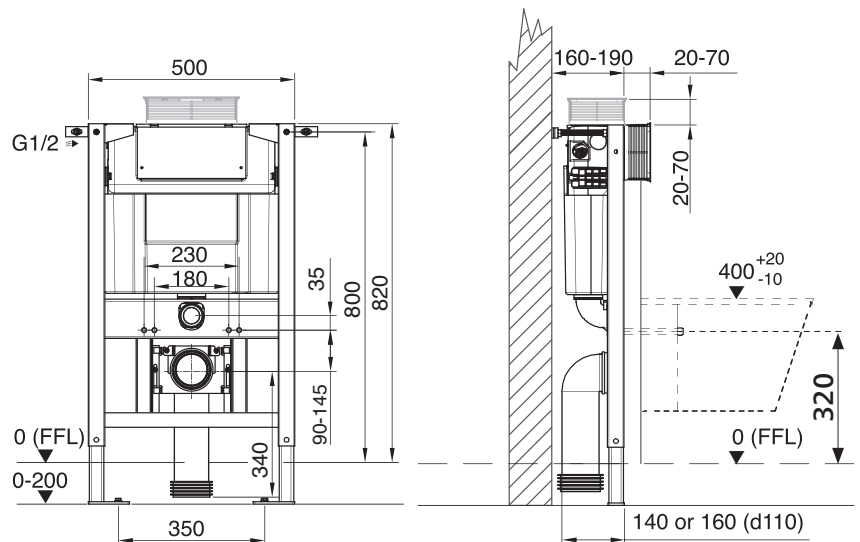

SEIMA

kitchen + laundry + bathroom ware

seima.com.au

Please note

- Installation shall be in accordance with AS/NZS3500.
- All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant. Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.

- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.